


STEP-BY-STEP INSTALLATION GUIDE

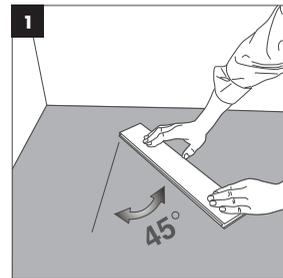

1. Getting started.

Choose a wall to start at and begin installing at the left corner. Start with an A-panel and place it with its long side marking facing the left wall at an angle of 45°.


Make sure that the distance between the left wall and the panel is less than the length of one panel.



2. Connect next panel

Continue with a B-panel. Press the long side of the B-Panel at an angle against the short side of the previous installed A panel.


Fold down the B-panel flat to the floor to lock the panels tightly together. Check that the grooves on the two panels form a continuous line.

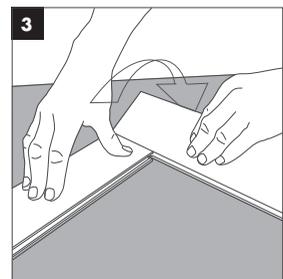

3. Connect additional panels







Next panel is an A-panel. Again, press the long side of the new A-panel at an angle against the short side of the previous B-panel and fold down. Continue like this with as many panels as may fit along the starting wall.

* Please note: Gaskets must be used on any short side / header joints where no tongue exists on the connecting board.

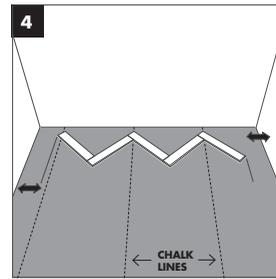


4. Center the first row

Check that the first row of panels is centered along the starting wall.
Make sure that the distance to the walls on both sides are less than the length of one panel. If not, add a panel at the right side.

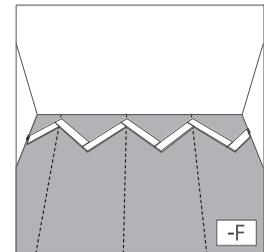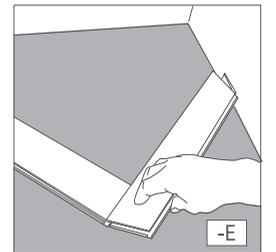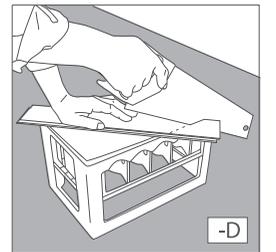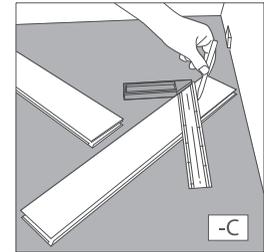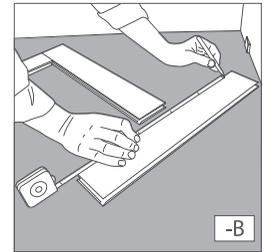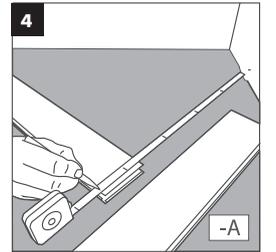


5. Cut the end panels to size

Measure and cut the end panels to size using a fine-toothed saw. Finish the first row with the cut end panels. Make sure that you leave a gap of 15mm to each wall.

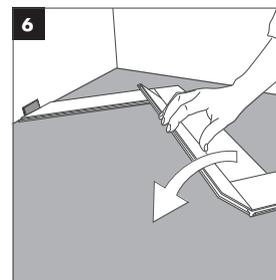


6. Start the second row

Start the next row with an A-panel. Place the new panel against the previous row and fold down.

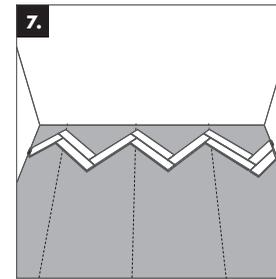


7. Install the A-panels

Continue from the left to the right and install all the A-panels in the second row.
Finish with a piece of panel cut to size (step 5).

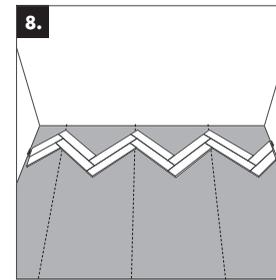




8. Continue with the B-panels

Now work in the opposite direction, from the right to the left and install all the B panels in the second row. Finish with a piece of panel cut to size (step 5).

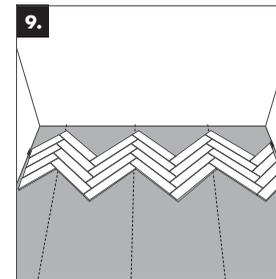


9. Complete four rows

Install additional rows to complete four full rows.

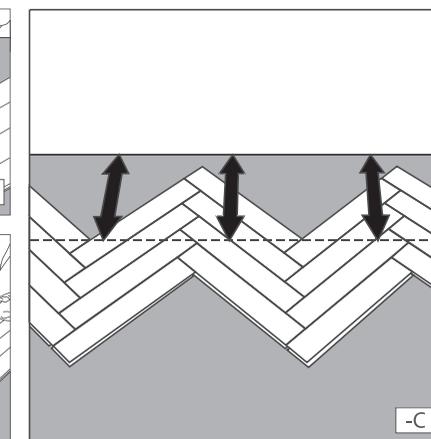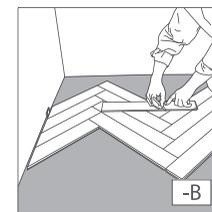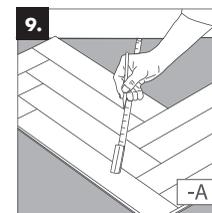






10. Adjust the starting rows

The first four rows have to be cut parallel to the wall. Measure and mark where to cut the floor panels at a fixed / parallel distance to the wall.

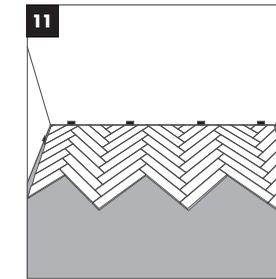

15. Subsequent rows


Start each subsequent row by installing the A-panels from the left to the right and complete the row by laying the B-panels from the right to the left.

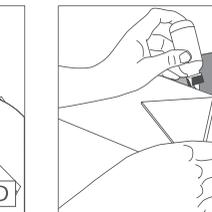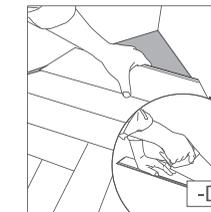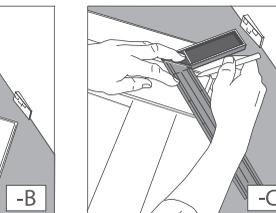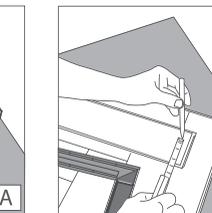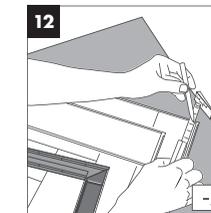

16. Last row

Measure and cut the panels in the last row to size.

It is recommended to use glue to install the smallest pieces of panels. Apply a small quantity of glue inside the groove.

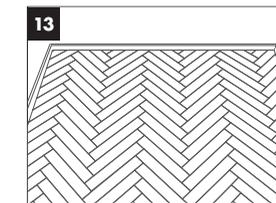

13. Spacers and skirting

Remove the spacers and cover the expansion gap with skirting boards or beadings.